Industrial
Lite-managed Ethernet Switch

IES-2000 Series User's Manual

Version 1.0

May, 2008.

ORing Industrial Networking Corp.

4F., NO.3, Lane235, Baociao Rd.Sindian City,

Taipei County 23145 Taiwan, R.O.C.

Tel: + 886 2 2918 3036

Fax:+ 886 2 2918 3084

Website : www.oring-networking.com

E-mail : support@oring-networking.com

Table of Content

Getting to Know Your Switch 3

1.1 About the IES-2000 series Smart Industrial Switch 3

1.2 Software Features 3

1.3 Hardware Features 3

Hardware Installation 4

2.1 Installation Switch on DIN-Rail 4

2.1.1 Mount IES-2060 & IES-2042F Series on DIN-Rail 4

2.1.2 Mount IES-2050 on DIN-Rail 5

2.2 Wall Mounting Installation 6

2.2.1 Mount IES-2060 & IES-2042F Series on wall 6

2.2.2 Mount IES-2050 on wall 8

Hardware Overview 9

3.1 Front Panel 9

3.2 Front Panel LEDs 13

3.3 Bottom Panel 14

3.4 Rear Panel 15

Cables 16

4.1 Ethernet Cables 16

4.1.1 100BASE-TX/10BASE-T Pin Assignments 16

4.2 Fibers 17

WEB Management 18

5.1 Configuration by Web Browser 18

5.1.1 About Web-based Management 18

5.1.2 Basic Setting 19

5.1.2.1 Switch setting 19

5.1.2.2 Admin Password 20

5.1.2.3 IP configuration 21
5.1.2.4 SNTP Configuration 22
5.1.2.5 Backup & Restore 25
5.1.2.6 Upgrade Firmware 26
5.1.2.7 Factory Default 26
5.1.2.8 System Reboot 26
5.1.3 Port Configuration 27
5.1.3.1 Port Control 27
5.1.3.2 Port Status 28
5.1.4 Redundancy 28
5.1.4.1 Fast Recovery Mode 28
5.1.4.2 O-Ring 29
5.1.4.3 RSTP 31
5.1.5 SNMP Configuration 34
5.1.5.1 SNMP –Agent Setting 34
5.1.5.2 SNMP –Trap Setting 35
5.1.6 VLAN 36
5.1.6.1 VLAN Configuration – Port Based 36
5.1.7 Warning 37
5.1.7.1 Fault Alarm 37
5.1.8 Front Panel 41
5.1.9 Save Configuration 41
5.1.10 LLDP 42

Technical Specifications 42

Getting to Know Your Switch

1.1 About the IES-2000 series Smart Industrial Switch

The IES-2000 series switch is a cost-effect and powerful industrial switch. The switch has many features; it can work under wide temperature and dusty environment.

The IES-2000 series switch can be managed by WEB and a useful Window Utility we called Open-Vision. Open-Vision is powerful network management software. The friendly and powerful interface helps you to configure multiple switches and monitor their status at the same time.

1.2 Software Features

- World's fastest Redundant Ethernet Ring (Recovery time < 10ms over 250 units connection)
- Supports Ring Coupling, Dual Homing and RSTP over O-Ring
- Support fast recovery mode
- Easy-to-configure: Web / Windows utility
- Windows utility (Open-Vision) for network management

1.3 Hardware Features

- Wide Operating Temperature: -40 to 70 ^{o}C
- Storage Temperature: -40 to 85 ^{o}C
- Operating Humidity: 5% to 95%, non-condensing
- 10/100Base-T(X) Ethernet port
- 100Base-FX Fiber port

Hardware Installation

2.1 Installation Switch on DIN-Rail

Each switch has a DIN-Rail kit on rear panel. The DIN-Rail kit helps switch to fix on the DIN-Rail. It is easy to install the switch on the DIN-Rail:

2.1.1 Mount IES-2060 & IES-2042F Series on DIN-Rail

Step 1: Slant the switch and mount the metal spring to DIN-Rail.

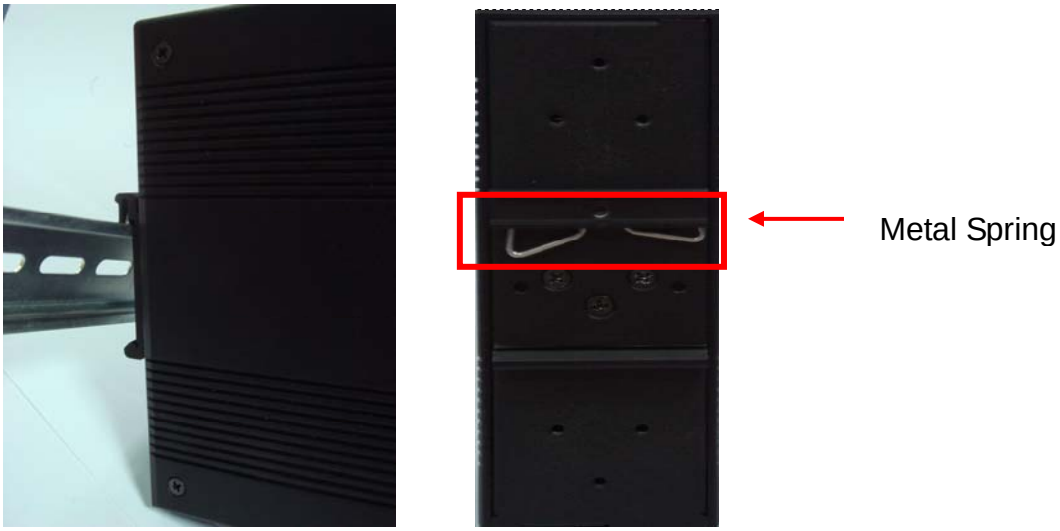

Step 2: Push the switch toward the DIN-Rail until you heard a "click" sound.

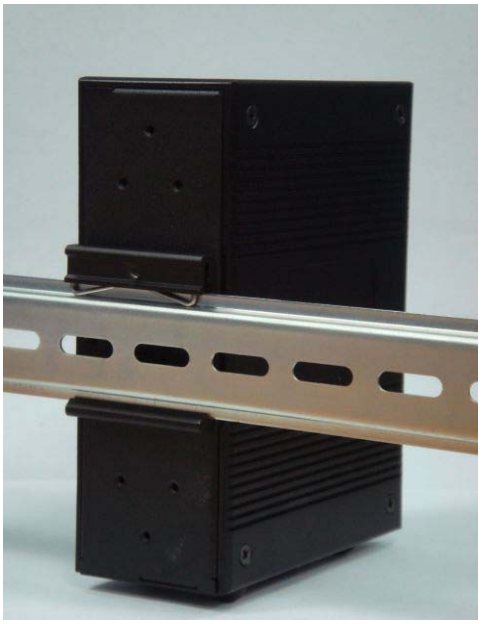

2.1.2 MOUNT IES-2050 ON DIN-RAIL

Step 1: Slant the switch and mount the metal spring to DIN-Rail.

Step 2: Push the switch toward the DIN-Rail until you heard a "click" sound.

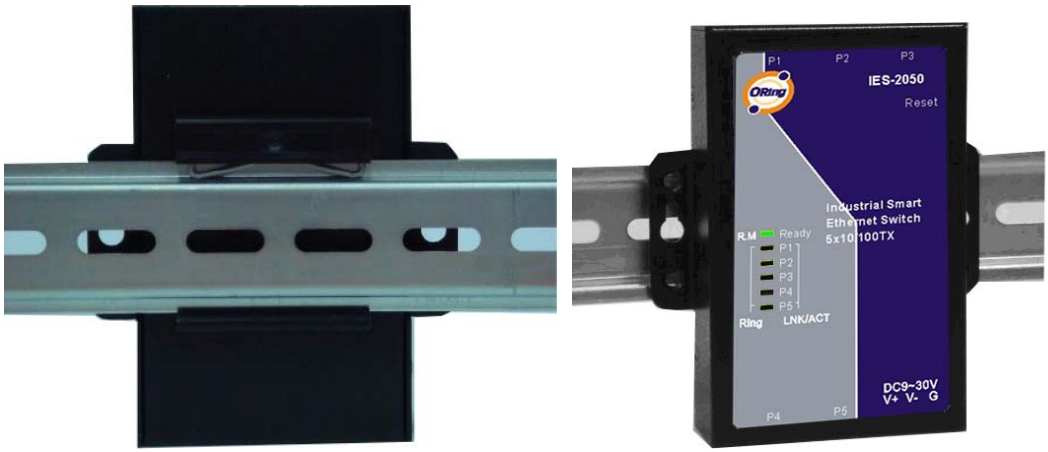

2.2 Wall Mounting Installation

Each switch has another installation method for users to fix the switch. A wall mount panel can be found in the package. The following steps show how to mount the switch on the wall:

2.2.1 MOUNT IES-2060 & IES-2042F SERIES ON WALL

Step 1: Remove DIN-Rail kit.

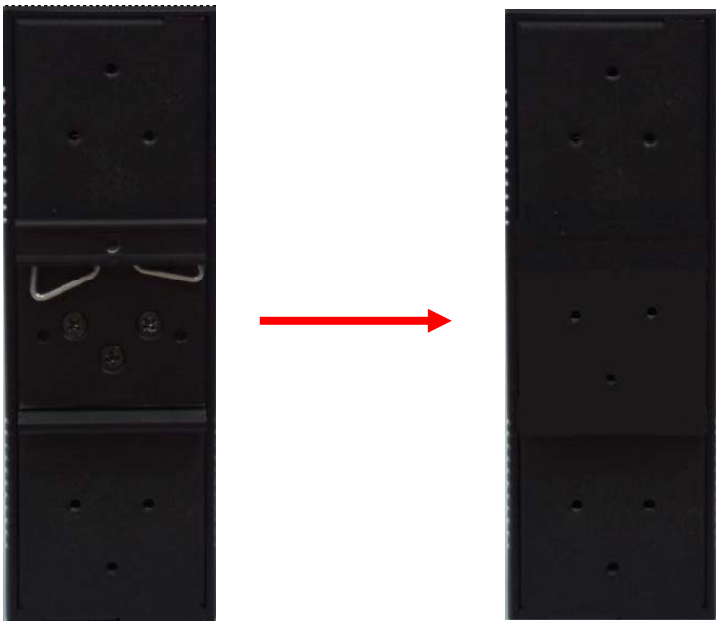

Step 2: Use 6 screws that can be found in the package to combine the wall mount panel. Just like the picture shows below:

The screws specification shows in the following two pictures. In order to prevent switches from any damage, the screws should not larger than the size that used in IES-2000 switches.

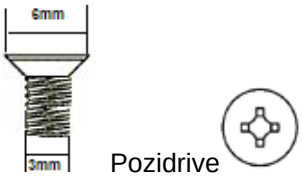

Step 3: Mount the combined switch on the wall.

2.2.2 MOUNT IES-2050 ON WALL

Step 1: Remove DIN-Rail kit.

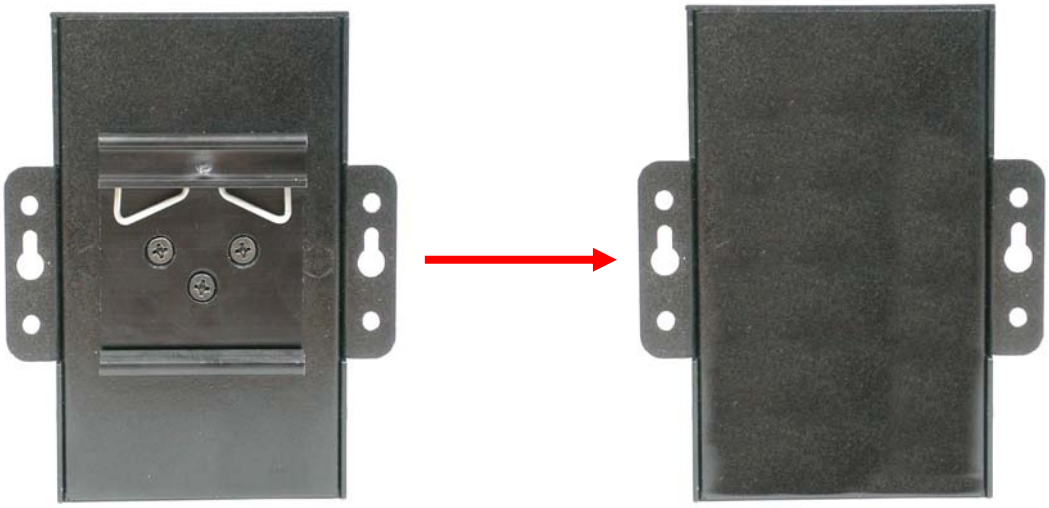

Step 2: Use 4 screws that can be found in the package to mount the switch on the wall.

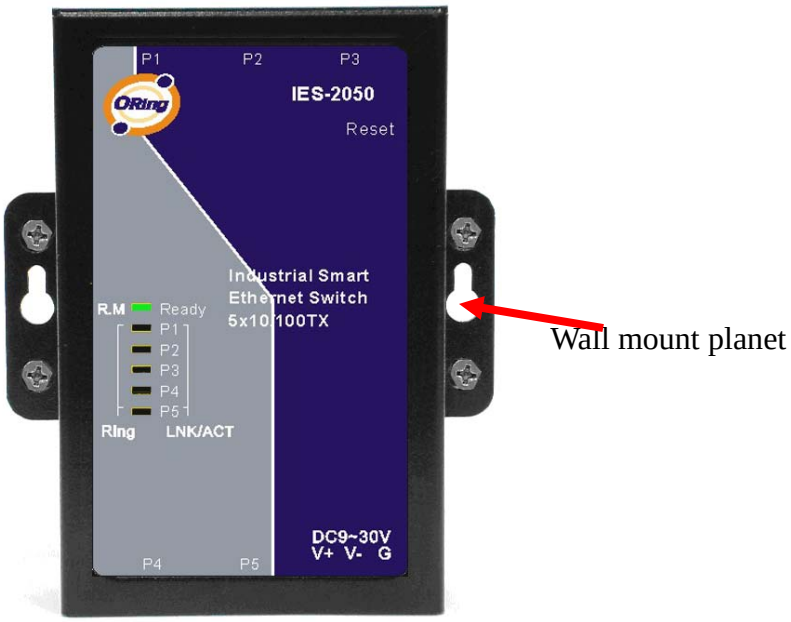

Hardware Overview

3.1 Front Panel

The following table describes the labels that stick on the IES-2000 series.

Port	Description
10/100 RJ-45 fast Ethernet ports	10/100Base-T(X) RJ-45 fast Ethernet ports support auto-negotiation. Default Setting : Speed: auto Duplex: auto Flow control : disable
Fiber port	100BaseFX for IES-2042F Series
Reset	Push reset button 2 to 3 seconds to reset the switch. Push reset button 5 second to reset the switch into **Factory Default.**

IES-2042F Series

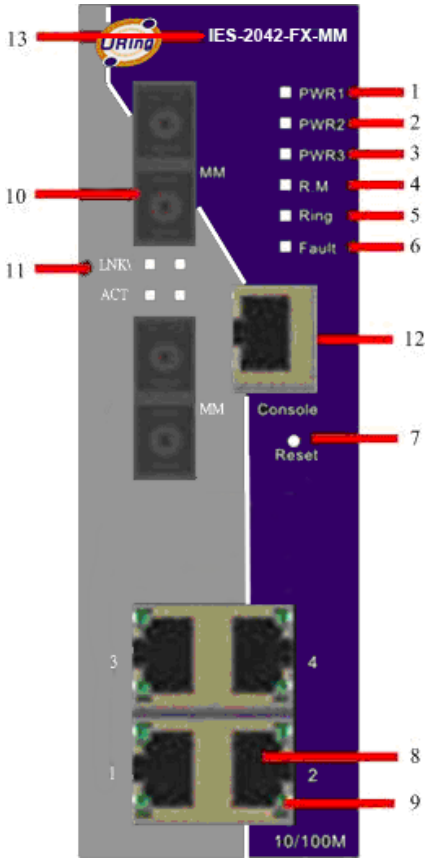

1. LED for PWR1. When the PWR1 links, the green led will be light on.
2. LED for PWR2. When the PWR2 links, the green led will be light on.
3. LED for PWR3. When the PWR3 links, the green led will be light on.
4. LED for R.M (Ring master). When the LED light on, it means that the switch is the ring master of O-Ring.
5. LED for Ring. When the led light on, it means the O-Ring is activated.
6. LED for Fault Relay. When the fault occurs, the amber LED will be light on.
7. Reset button. Push the button 3 seconds for reset; 5 seconds for factory default.
8. 10/100Base-T(X) Ethernet ports. (IES-2042F-P contains PD function of P.O.E.)
9. LED for Ethernet ports status.
10. Model name
11. 100BaseFX fiber port.
12. LED for fiber port.

IES-2060

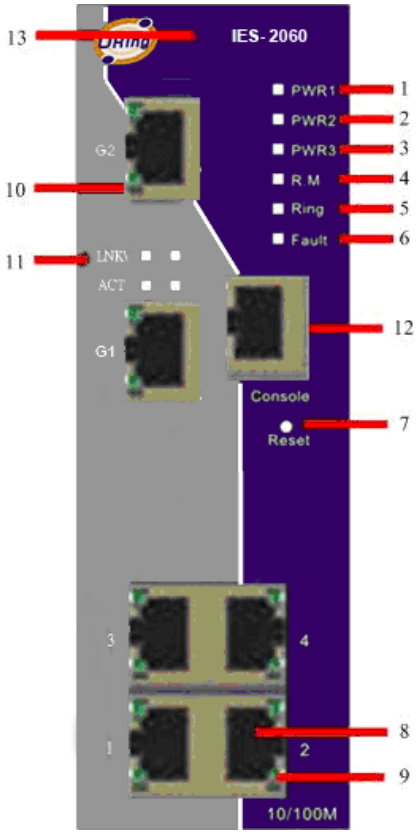

1. LED for PWR1. When the PWR1 links, the green led will be light on.
2. LED for PWR2. When the PWR2 links, the green led will be light on.
3. LED for PWR3. When the PWR3 links, the green led will be light on.
4. LED for R.M (Ring master). When the LED light on, it means that the switch is the ring master of O-Ring.
5. LED for Ring. When the led light on, it means the O-Ring is activated.
6. LED for Fault Relay. When the fault occurs, the amber LED will be light on.
7. Reset button. Push the button 3 seconds for reset; 5 seconds for factory default.
8. 10/100Base-T(X) Ethernet ports..
9. LED for Ethernet ports status.
10. Model name
11. 10/100Base-T(X) Ethernet ports..
12. LED for Ethernet ports status.

IES-2050

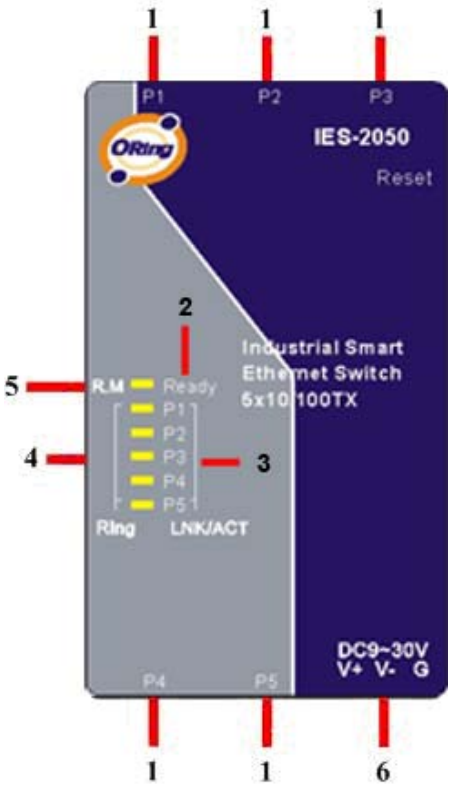

1. 10/100Base-T(X) Ethernet ports..
2. LED for Ready. When the switch works normally, the green led will be light on.
3. LED for Ethernet ports link status.
4. LED for Ethernet ports in Ring mode.
5. LED for R.M (Ring master). When the LED light on, it means that the switch is the ring master of O-Ring.
6. DC 9~30V power input.

3.2 Front Panel LEDs

LED	Color	Status	Description
PW1	Green	On	DC power module 1 activated.
PW2	Green	On	DC power module 2 activated.
PW3	Green	On	Power jack activated.
R.M	Green	On	O-Ring Master.
Ring	Green	On	O-Ring enabled.
		Slowly blinking	O-Ring topology has problem
		Fast blinking	O-Ring work normally.
Fault	Amber	On	Fault relay. Power failure or Port down/fail.
10/100Base-T(X) Fast Ethernet ports			
LNK / ACT	Green	On	Port link up.
		Blinking	Data transmitted.
Full Duplex	Amber	On	Port works under full duplex.
Fiber ports			
ACT	Green	Blinking	Data transmitted.
LNK	Amber	On	Port link up.

3.3 Bottom Panel

The bottom panel components of IES-2060 & IES-2042FX Series are showed as below:

1. Terminal block includes: PWR1, PWR2 (12-48V DC) and Relay output (1A@24VDC).
2. Power jack for PWR3 (12-45VDC).

.

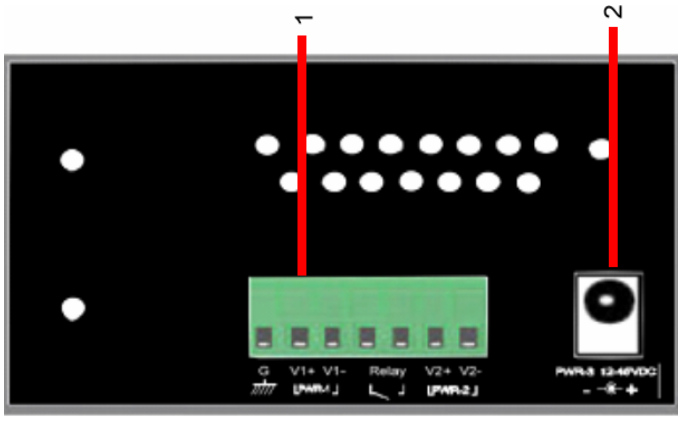

IES-2060 / IES-2042F Series

The bottom panel components of IES-2050 are showed as below:

1. Terminal block includes: 9 ~ 30V DC
2. RJ45 Ethernet port

RJ45 Jack RJ45 Jack DC 9~30V power input

IES-2050

3.4 Rear Panel

The rear panel components of IES-2000 are showed as below:

1. Screw holes for wall mount kit.
2. Din-Rail kit

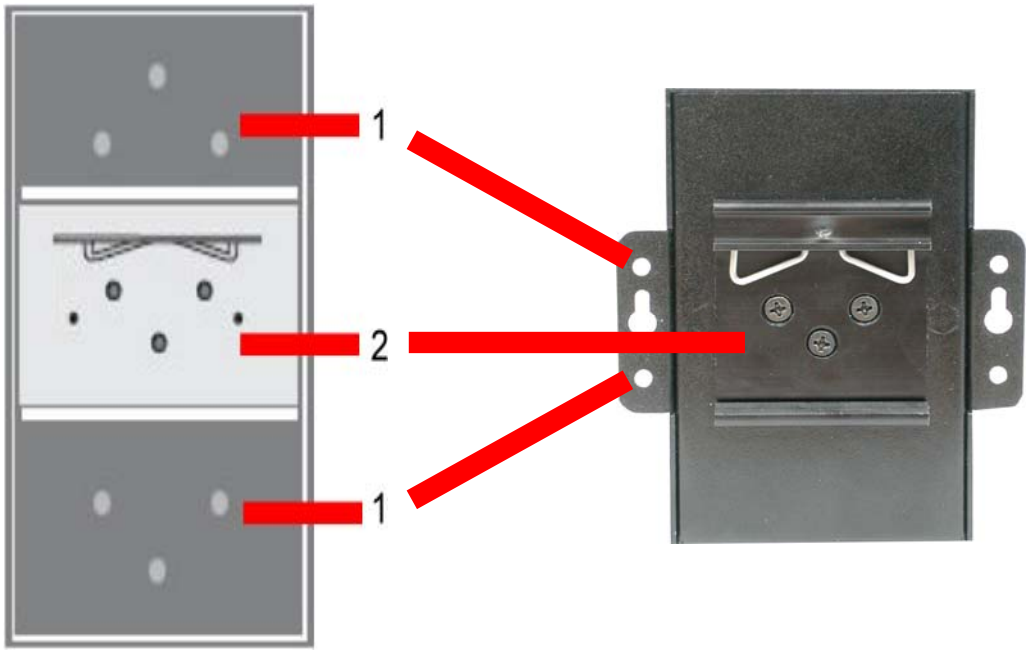

Cables

4.1 Ethernet Cables

The IES-2000 series switches have standard Ethernet ports. According to the link type, the switches use CAT 3, 4, 5,5e UTP cables to connect to any other network device (PCs, servers, switches, routers, or hubs). Please refer to the following table for cable specifications.

Cable Types and Specifications

Cable	Type	Max. Length	Connector
10BASE-T	Cat. 3, 4, 5 100-ohm	UTP 100 m (328 ft)	RJ-45
100BASE-TX	Cat. 5 100-ohm UTP	UTP 100 m (328 ft)	RJ-45

4.1.1 100BASE-TX/10BASE-T Pin Assignments

With 100BASE-TX/10BASE-T cable, pins 1 and 2 are used for transmitting data, and pins 3 and 6 are used for receiving data.

RJ-45 Pin Assignments

Pin Number	Assignment
1	TD+
2	TD-
3	RD+
4	Not used
5	Not used
6	RD-
7	Not used
8	Not used

The IES-2000 series switches support auto MDI/MDI-X operation. You can use a straight-through cable to connect PC and switch. The following table below shows the 10BASE-T/ 100BASE-TX MDI and MDI-X port pin outs.

MDI/MDI-X pins assignment

Pin Number	MDI port	MDI-X port
1	TD+(transmit)	RD+(receive)
2	TD-(transmit)	RD-(receive)
3	RD+(receive)	TD+(transmit)
4	Not used	Not used
5	Not used	Not used
6	RD-(receive)	TD-(transmit)
7	Not used	Not used
8	Not used	Not used

Note: "+" and "-" signs represent the polarity of the wires that make up each wire pair.

4.2 Fibers

The following two models, IES-2042FX-MM, IES-2042FX-SS, have fiber optical ports. The fiber optical ports are in multi-mode (0 to 2 km, 1310 nm (50/125 µm, 62.5/125 µm) and single-mode with SC connector. Please remember that the TX port of Switch A should be connected to the RX port of Switch B.

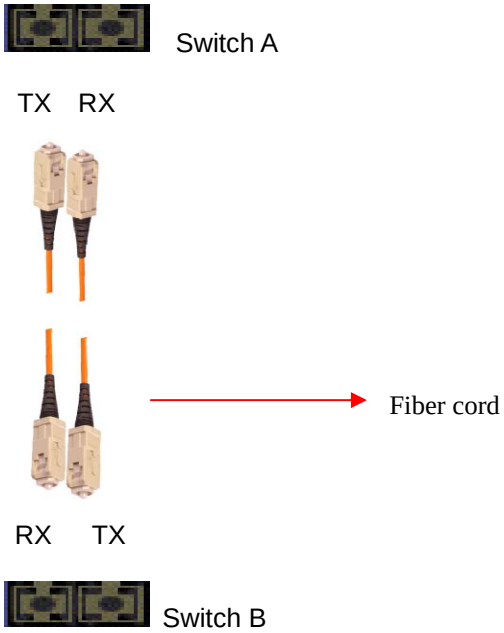

WEB Management

5.1 Configuration by Web Browser

This section introduces the configuration by Web browser.

5.1.1 About Web-based Management

Inside the CPU board of the switch, an embedded HTML website resides in flash memory. It contains advanced management features and allows you to manage the switch from anywhere on the network through a standard browser such as Microsoft Internet Explorer. The Web-Based Management supports Internet Explorer 5.0. It is based on Java Applets with an aim to reduce network bandwidth consumption, enhance access speed and present an easy viewing screen.

Note: By default, IE5.0 or later version does not allow Java Applets to open sockets. You need to explicitly modify the browser setting in order to enable Java Applets to use network ports.

Preparing for Web Management

The default value is as below:

IP Address: **192.168.10.1**

Subnet Mask: **255.255.255.0**

Default Gateway: **192.168.10.254**

User Name: **admin**

Password: **admin**

System Login

1. Launch the Internet Explorer.
2. Type http:// and the IP address of the switch. Press "**Enter**".

3. The login screen appears.
4. Key in the username and password. The default username and password is "**admin**".
5. Click "**Enter**" or "**OK**" button, then the main interface of the Web-based management appears.

Login screen

Main Interface

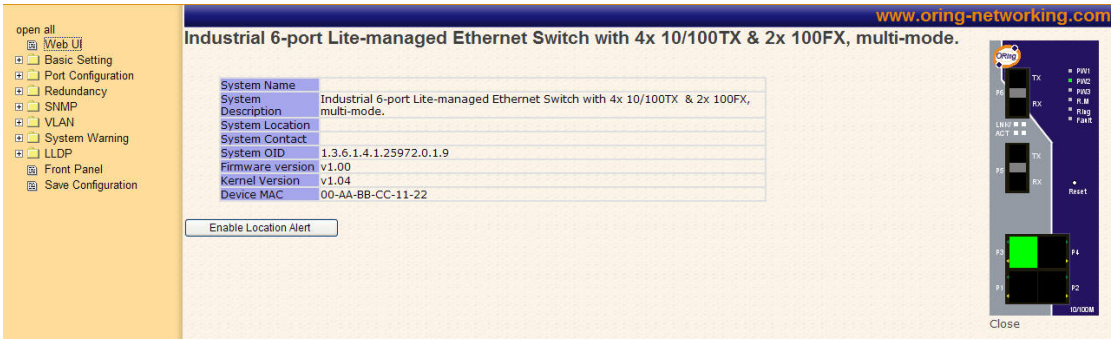

Main interface

5.1.2 Basic Setting

5.1.2.1 Switch setting

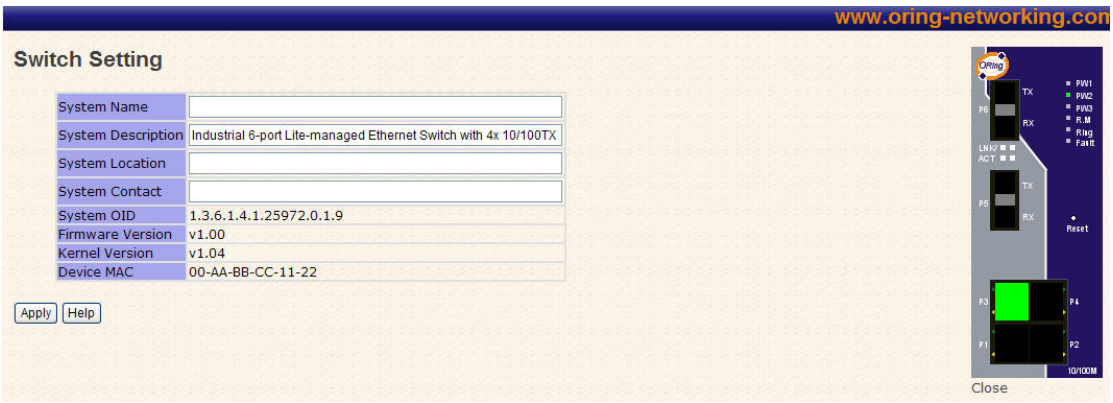

Switch setting interface

The following table describes the labels in this screen.

Label	Description
System Name	Assign the name of switch. The maximum length is 64 bytes
System Description	Display the description of switch.
System Location	Assign the switch physical location. The maximum length is 64 bytes
System Contact	Enter the name of contact person or organization
Firmware Version	Display the switch's firmware version
Kernel Version	Display the kernel software version
MAC Address	Display the unique hardware address assigned by manufacturer (default)

5.1.2.2 Admin Password

Change web management login username and password for the management security issue

Admin Password interface

The following table describes the labels in this screen.

Label	Description
User name	Key in the new username (The default is "**admin**")
New Password	Key in the new password (The default is "**admin**")
Confirm password	Re-type the new password.
Apply	Click "**Apply**" to set the configurations.

5.1.2.3 IP configuration

You can configure the IP Settings and DHCP client function through IP configuration.

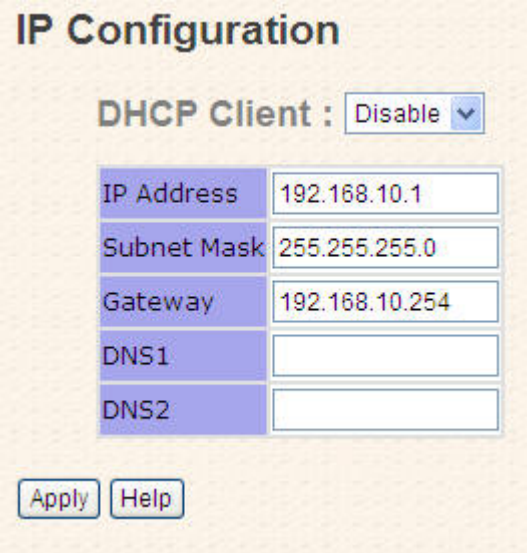

IP Configuration interface

The following table describes the labels in this screen.

Label	Description
DHCP Client	To enable or disable the DHCP client function. When DHCP client function is enabling, the switch will assign the IP address from the network DHCP server. The default IP address will be replaced by the IP address which the DHCP server has assigned. After clicking "**Apply**" button, a popup dialog will show up to inform you when the DHCP client is enabling. The current IP will lose and you should find the new IP on the DHCP server.
IP Address	Assign the IP address that the network is using. If DHCP client function is enabling, you do not need to assign the IP address. The network DHCP server will assign the IP address for the switch and it will be displayed in this column. The default IP is 192.168.10.1
Subnet Mask	Assign the subnet mask for the IP address. If DHCP client function is enabling, you do not need to assign the subnet mask.
Gateway	Assign the network gateway for the switch. The default gateway is 192.168.10.254
DNS1	Assign the primary DNS IP address
DNS2	Assign the secondary DNS IP address
Apply	Click "**Apply**" to set the configurations.

5.1.2.4 SNTP Configuration

The SNTP (Simple Network Time Protocol) settings allow you to synchronize switch clocks in the Internet.

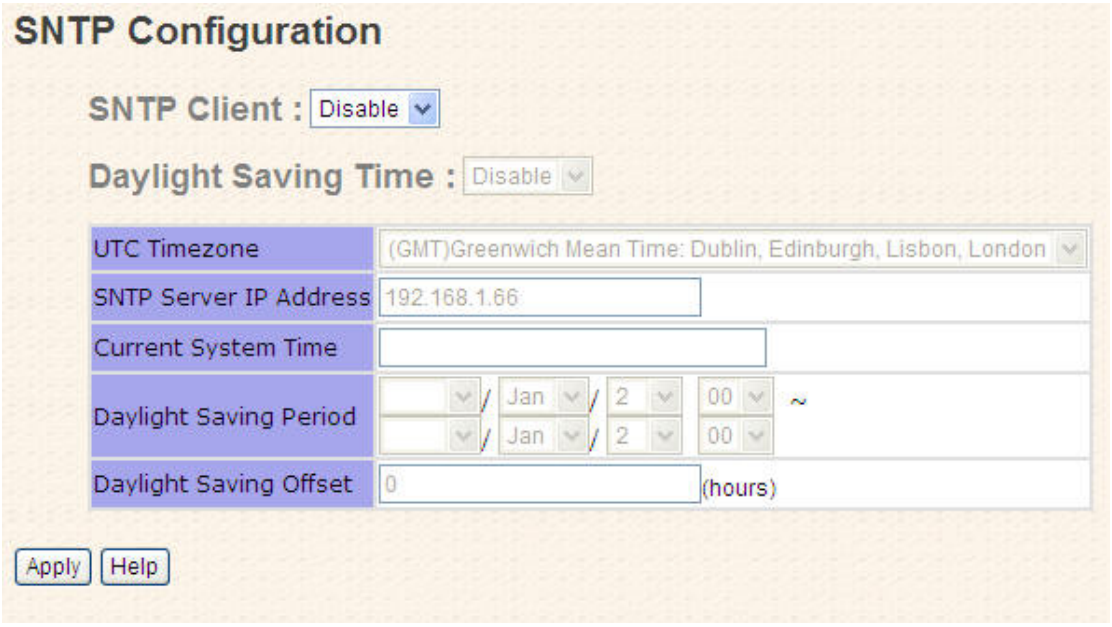

SNTP Configuration interface

The following table describes the labels in this screen.

Label	Description
SNTP Client	Enable or disable SNTP function to get the time from the SNTP server.
Daylight Saving Time	Enable or disable daylight saving time function. When daylight saving time is enabling, you need to configure the daylight saving time period.
UTC Time zone	Set the switch location time zone. The following table lists the different location time zone for your reference.

Local Time Zone	Conversion from UTC	Time at 12:00 UTC
November Time Zone	- 1 hour	11 am
Oscar Time Zone	-2 hours	10 am
ADT - Atlantic Daylight	-3 hours	9 am

AST - Atlantic Standard EDT - Eastern Daylight	-4 hours	8 am
EST - Eastern Standard CDT - Central Daylight	-5 hours	7 am
CST - Central Standard MDT - Mountain Daylight	-6 hours	6 am
MST - Mountain Standard PDT - Pacific Daylight	-7 hours	5 am
PST - Pacific Standard ADT - Alaskan Daylight	-8 hours	4 am
ALA - Alaskan Standard	-9 hours	3 am
HAW - Hawaiian Standard	-10 hours	2 am
Nome, Alaska	-11 hours	1 am
CET - Central European FWT - French Winter MET - Middle European MEWT - Middle European Winter SWT - Swedish Winter	+1 hour	1 pm
EET - Eastern European, USSR Zone 1	+2 hours	2 pm
BT - Baghdad, USSR Zone 2	+3 hours	3 pm
ZP4 - USSR Zone 3	+4 hours	4 pm
ZP5 - USSR Zone 4	+5 hours	5 pm
ZP6 - USSR Zone 5	+6 hours	6 pm
WAST - West Australian Standard	+7 hours	7 pm
CCT - China Coast, USSR Zone 7	+8 hours	8 pm
JST - Japan Standard,	+9 hours	9 pm

USSR Zone 8		
EAST - East Australian Standard GST Guam Standard, USSR Zone 9	+10 hours	10 pm
IDLE - International Date Line NZST - New Zealand Standard NZT - New Zealand	+12 hours	Midnight

Label	Description
SNTP Sever IP Address	Set the SNTP server IP address.
Daylight Saving Period	Set up the Daylight Saving beginning time and Daylight Saving ending time. Both will be different each year.
Daylight Saving Offset	Set up the offset time.
Switch Timer	Display the switch current time.
Apply	Click "**Apply**" to set the configurations.

5.1.2.5 Backup & Restore

You can save current EEPROM value of the switch to TFTP server, then go to the TFTP restore configuration page to restore the EEPROM value.

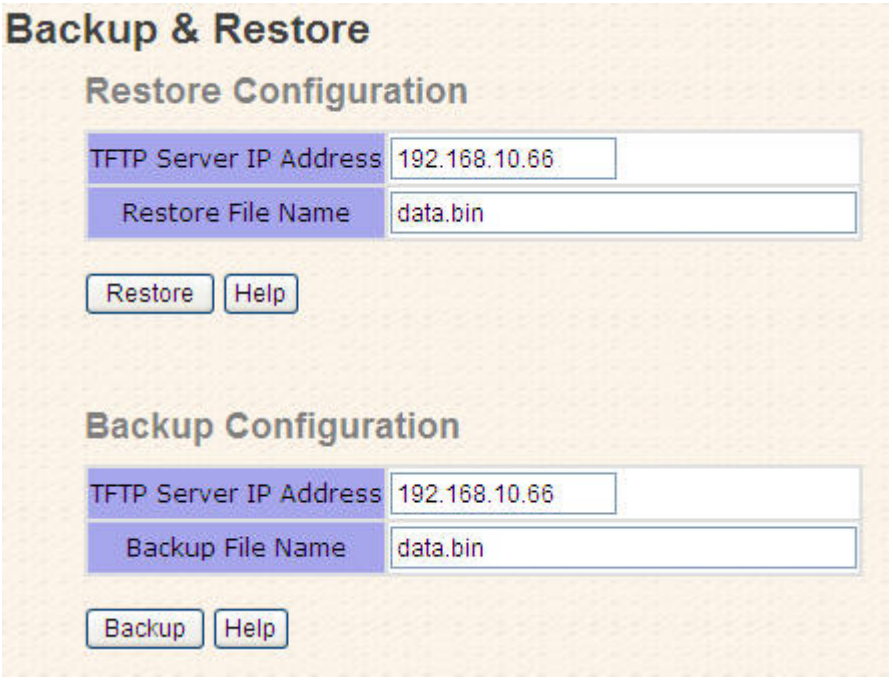

Backup & Restore interface

The following table describes the labels in this screen.

Label	Description
TFTP Server IP Address	Fill in the TFTP server IP
Restore File Name	Fill the file name.
Restore	Click "**restore**" to restore the configurations.
Restore File Name	Fill the file name.
Restore	Click "**restore**" to restore the configurations.
Backup	Click "**backup**" to backup the configurations.

5.1.2.6 Upgrade Firmware

Upgrade Firmware allows you to update the switch firmware. Before updating, make sure you have your TFTP server ready and the firmware image is on the TFTP server.

Update Firmware interface

5.1.2.7 Factory Default

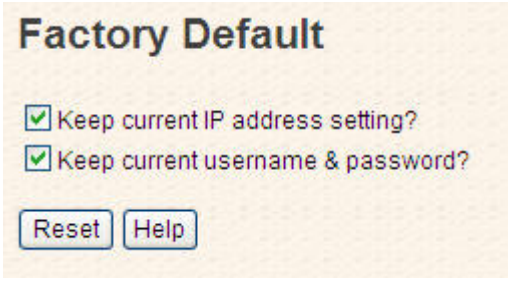

Factory Default interface

Reset switch to default configuration. Click Reset to reset all configurations to the default value. You can select "**Keep current IP address setting**" and "**Keep current username & password**" to prevent IP and username & password from default.

5.1.2.8 System Reboot

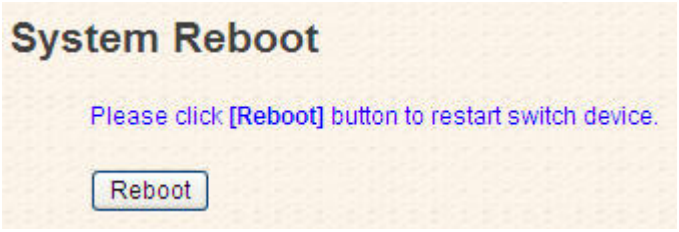

System Reboot interface

5.1.3 Port Configuration

5.1.3.1 Port Control

By this function, you can set the state, speed/duplex, flow control, and security of the port.

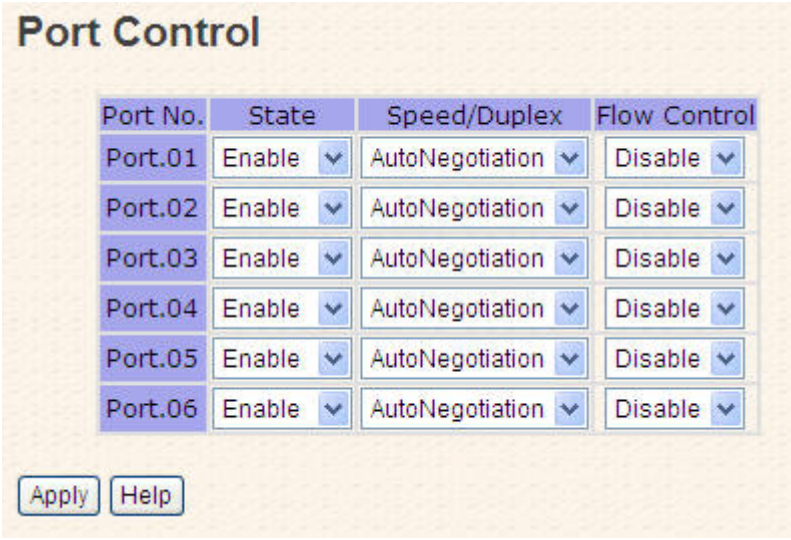

Port Control interface

The following table describes the labels in this screen.

Label	Description
Port NO.	Port number for setting.
State	Enable/Disable the port.
Speed/Duplex	You can set Auto-negotiation, 100 full,100 half,10 full,10 half mode.
Flow Control	Support symmetric and asymmetric mode to avoid packet loss when congestion occurred.
Apply	Click "**Apply**" to set the configurations.

5.1.3.2 Port Status

The following information provides the current port status.

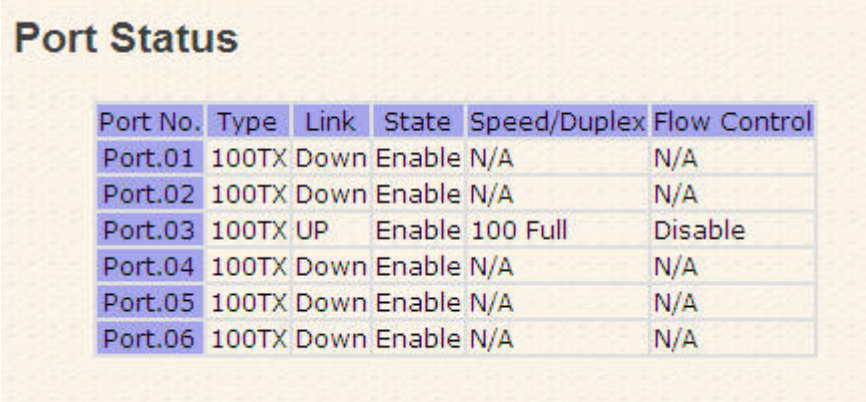
Port Status
Port No. Type Link State Speed/Duplex Flow Control
Port.01 100TX Down Enable N/A N/A
Port.02 100TX Down Enable N/A N/A
Port.03 100TX UP Enable 100 Full Disable
Port.04 100TX Down Enable N/A N/A
Port.05 100TX Down Enable N/A N/A
Port.06 100TX Down Enable N/A N/A

Port Status interface

5.1.4 Redundancy

5.1.4.1 Fast Recovery Mode

The Fast Recovery Mode can be set to connect multiple ports to one or more switches. The IES-2000 series with its fast recovery mode will provide redundant links. Fast Recovery mode supports 4 priorities, only the first priority will be the act port, the other ports configured with other priority will be the backup ports.

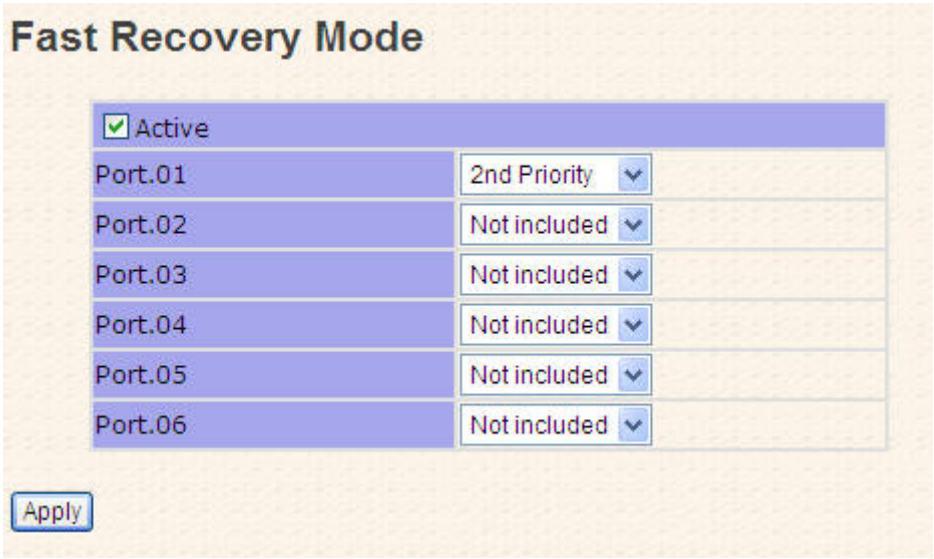

Fast Recovery Mode interface

The following table describes the labels in this screen.

Label	Description
Active	Activate the fast recovery mode.
port	Port can be configured as 5 priorities. Only the port with highest priority will be the active port. 1st Priority is the highest.
Apply	Click "**Apply**" to set the configurations.

5.1.4.2 O-Ring

O-Ring is the most powerful Ring in the world. The recovery time of O-Ring is less than 10 ms. It can reduce unexpected damage caused by network topology change.

O-Ring Supports 3 Ring topology: O-Ring, Coupling Ring and Dual Homing.

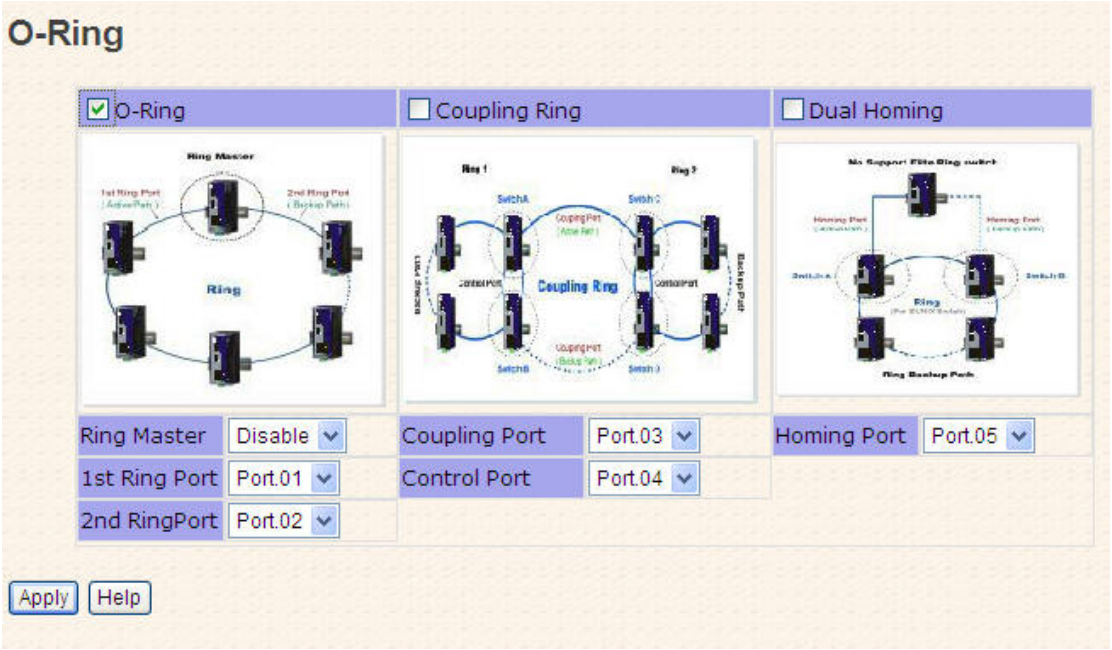

O-Ring interface

The following table describes the labels in this screen.

Label	Description
O-Ring	Mark to enable O-Ring.
Ring Master	There should be one and only one Ring Master in a ring. However if there are two or more switches which set Ring Master to enable, the switch with the lowest MAC address

	will be the actual Ring Master and others will be Backup Masters.
1st Ring Port	The primary port, when this switch is Ring Master.
2nd Ring Port	The backup port, when this switch is Ring Master.
Coupling Ring	Mark to enable Coupling Ring. Coupling Ring can be used to divide a big ring into two smaller rings to avoid effecting all switches when network topology change. It is a good application for connecting two O-Rings.
Coupling Port	Link to Coupling Port of the switch in another ring. Coupling Ring need four switch to build an active and a backup link. Set a port as coupling port. The coupled four ports of four switches will be run at active/backup mode.
Control Port	Link to Control Port of the switch of the same ring. Control Port used to transmit control signals.
Dual Homing	Mark to enable Dual Homing. By selecting Dual Homing mode, O-Ring will be connected to normal switches through two RSTP links (ex: backbone Switch). The two links work as active/backup mode, and connect each O-Ring to the normal switches in RSTP mode.
Apply	Click "**Apply**" to set the configurations.

Note: We don't suggest you to set one switch as a Ring Master and a Coupling Ring at the same time due to heavy load.

5.1.4.3 RSTP

The Rapid Spanning Tree Protocol (RSTP) is an evolution of the Spanning Tree Protocol. It provides faster spanning tree convergence after a topology change. The system also supports STP and the system will auto detect the connected device that is running STP or RSTP protocol.

RSTP setting

You can enable/disable the RSTP function, and set the parameters for each port.

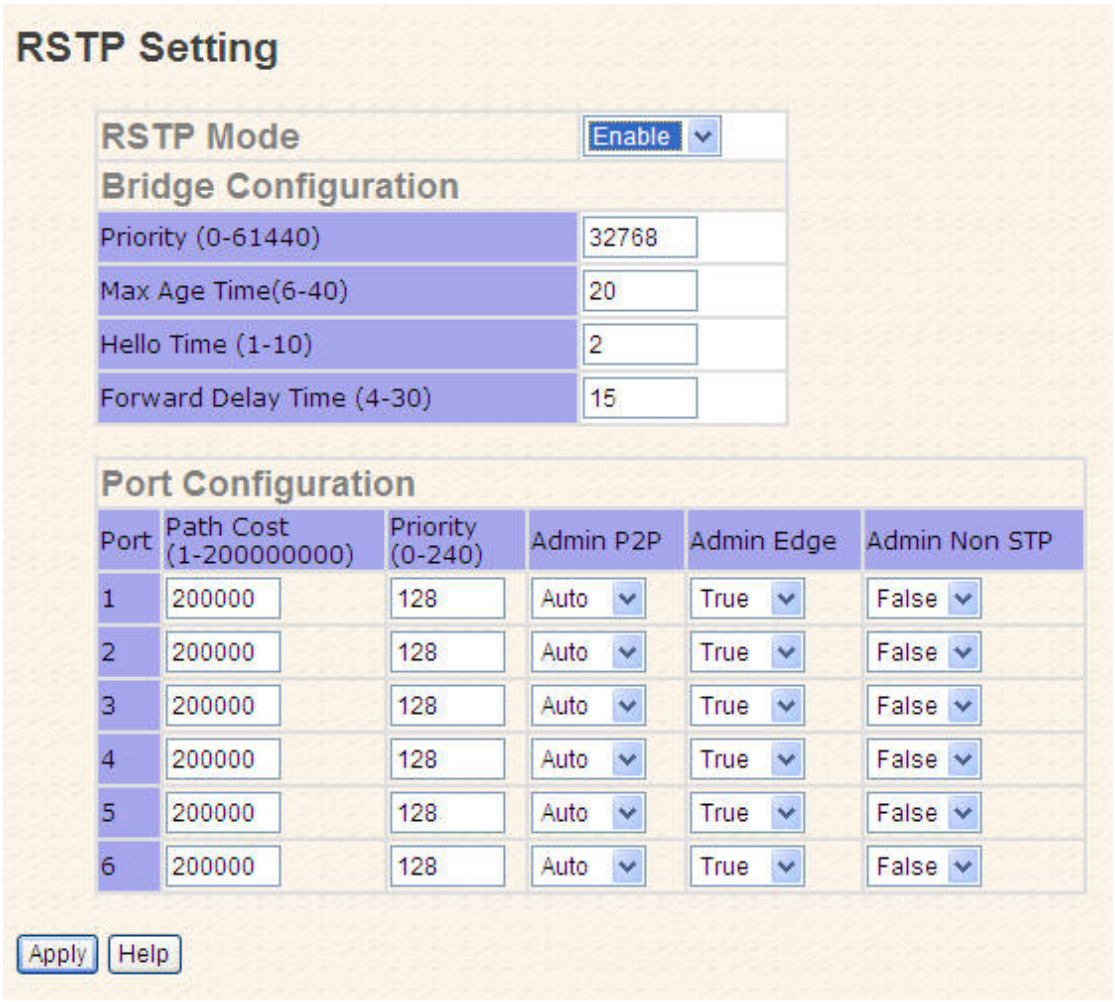

RSTP Setting interface

The following table describes the labels in this screen.

Label	Description
RSTP mode	You must enable or disable RSTP function before configuring the related parameters.
Priority (0-61440)	A value used to identify the root bridge. The bridge with the lowest value has the highest priority and is selected as the root. If the value changes, you must reboot the switch. The value must be multiple of 4096 according to the protocol standard rule.
Max Age (6-40)	The number of seconds a bridge waits without receiving Spanning-tree Protocol configuration messages before attempting a reconfiguration. Enter a value between 6 through 40.
Hello Time (1-10)	The time that controls switch sends out the BPDU packet to check RSTP current status. Enter a value between 1 through 10.
Forwarding Delay Time (4-30)	The number of seconds a port waits before changing from its Rapid Spanning-Tree Protocol learning and listening states to the forwarding state. Enter a value between 4 through 30.
Path Cost (1-200000000)	The cost of the path to the other bridge from this transmitting bridge at the specified port. Enter a number 1 through 200000000.
Priority (0-240)	Decide which port should be blocked by priority in LAN. Enter a number 0 through 240. The value of priority must be the multiple of 16
Admin P2P	Some of the rapid state transactions that are possible within RSTP are dependent upon whether the port concerned can only be connected to exactly one other bridge (i.e. It is served by a point-to-point LAN segment), or it can be connected to two or more bridges (i.e. It is served by a shared medium LAN segment). This function allows the P2P status of the link to be manipulated administratively. True means P2P enabling. False means P2P disabling.
Admin Edge	The port is directly connected to end stations, and it cannot create bridging loop in the network. To configure the port as an edge port, set the port to "**True**".
Admin Non STP	The port includes the STP mathematic calculation. **True** is

	not including STP mathematic calculation. **False** is including the STP mathematic calculation.
Apply	Click "**Apply**" to set the configurations.

NOTE: Follow the rule to configure the MAX Age, Hello Time, and Forward Delay Time.

2 x (Forward Delay Time value –1) > = Max Age value >= 2 x (Hello Time value +1)

RSTP Information

Show RSTP algorithm result at this table.

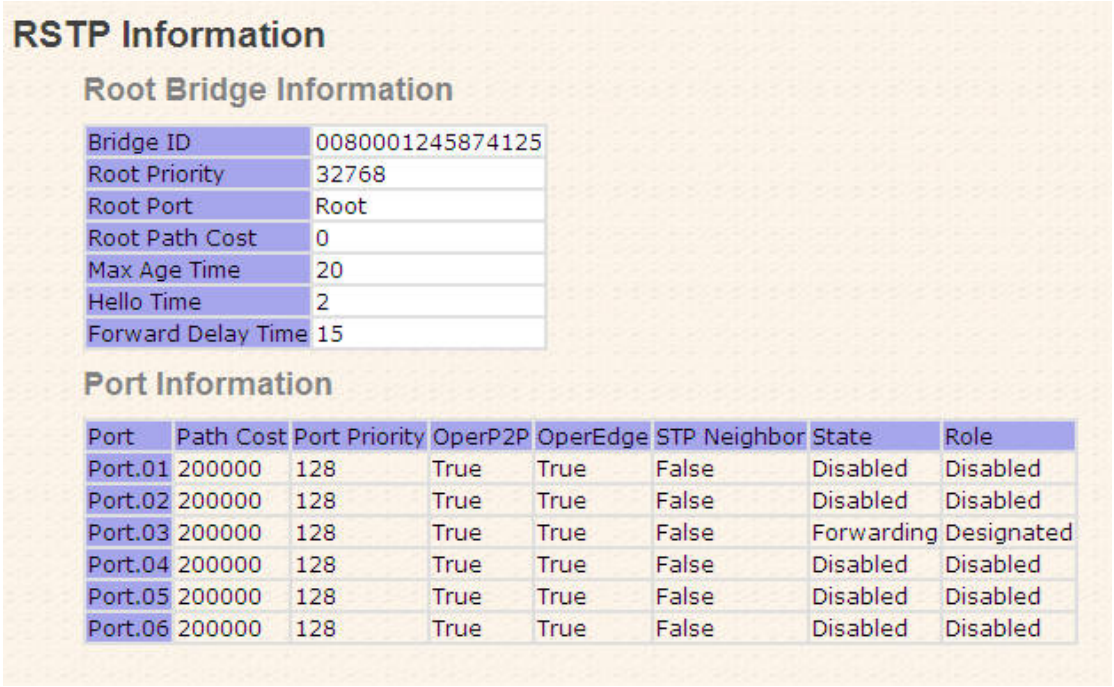
RSTP Information
Root Bridge Information
Bridge ID 0080001245874125
Root Priority 32768
Root Port Root
Root Path Cost 0
Max Age Time 20
Hello Time 2
Forward Delay Time 15
Port Information
Port Path Cost Port Priority OperP2P OperEdge STP Neighbor State Role
Port.01 200000 128 True True False Disabled Disabled
Port.02 200000 128 True True False Disabled Disabled
Port.03 200000 128 True True False Forwarding Designated
Port.04 200000 128 True True False Disabled Disabled
Port.05 200000 128 True True False Disabled Disabled
Port.06 200000 128 True True False Disabled Disabled

RSTP Information interface

5.1.5 SNMP Configuration

Simple Network Management Protocol (SNMP) is the protocol developed to manage nodes (servers, workstations, routers, switches and hubs etc.) on an IP network. SNMP enables network administrators to manage network performance, find and solve network problems, and plan for network growth. Network management systems learn of problems by receiving traps or change notices from network devices implementing SNMP.

5.1.5.1 SNMP –Agent Setting

You can set SNMP agent related information by Agent Setting Function.

The following table describes the labels in this screen.

Label	Description
SNMP –Agent Setting	SNMP Community should be set for SNMP. Four sets of "Community String/Privilege" are supported. Each Community String is maximum 32 characters. Keep empty to remove this Community string.

5.1.5.2 SNMP –Trap Setting

A trap manager is a management station that receives traps, the system alerts generated by the switch. If no trap manager is defined, no traps will issue. Create a trap manager by entering the IP address of the station and a community string. To define management stations as trap manager and enter SNMP community strings and selects the SNMP version.

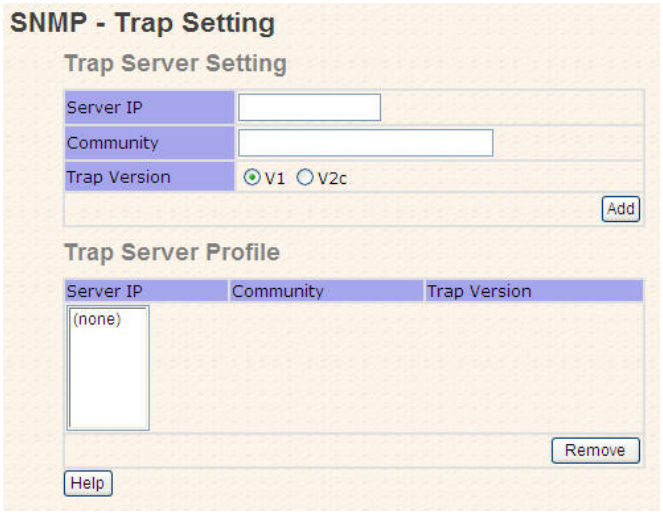

The following table describes the labels in this screen.

Label	Description
Server IP	The server IP address to receive Trap
Community	Community for authentication
Trap Version	Trap Version supports V1 and V2c.
Add	Add trap server profile.
Remove	Remove trap server profile.
Help	Show help file.

5.1.6 VLAN

A Virtual LAN (VLAN) is a logical network grouping that limits the broadcast domain, which allows you to isolate network traffic. Only the members of the VLAN will receive traffic from the same members of VLAN. Basically, creating a VLAN from a switch is logically equivalent of reconnecting a group of network devices to another Layer 2 switch. However, all the network devices are still plugged into the same switch physically.

The switch supports port-based VLAN only.

5.1.6.1 VLAN Configuration – Port Based

Packets can go among only members of the same VLAN group. Note all unselected ports are treated as belonging to another single VLAN. If the port-based VLAN enabled, the VLAN-tagging is ignored.

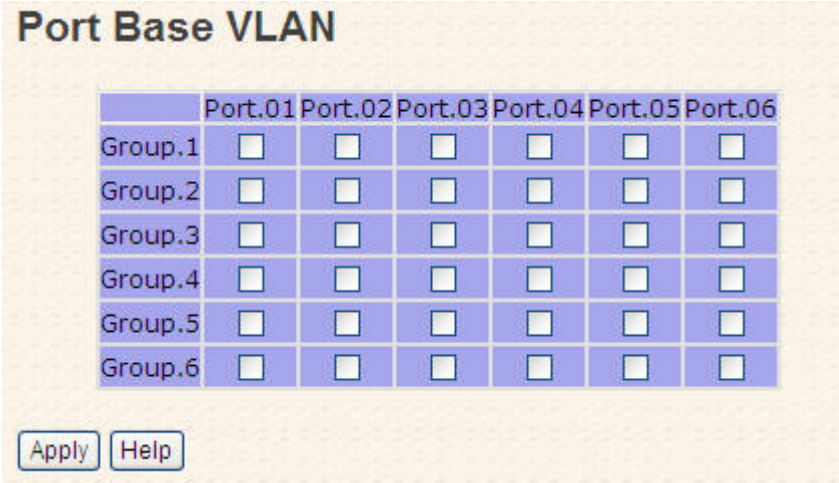

VLAN Configuration – Port Based VLAN interface

The following table describes the labels in this screen.

Label	Description
Group	Mark the blank to assign the port into VLAN group.
Apply	Click "**Apply**" to set the configurations.
Help	Show help file.

5.1.7 Warning

Warning function is very important for managing switch. You can manage switch by SYSLOG, E-MAIL, and Fault Relay. It helps you to monitor the switch status on remote site. When events occurred, the warning message will send to your appointed server, E-MAIL, or relay fault to switch panel.

5.1.7.1 Fault Alarm

When any selected fault event is happened, the Fault LED in switch panel will light up and the electric relay will signal at the same time.

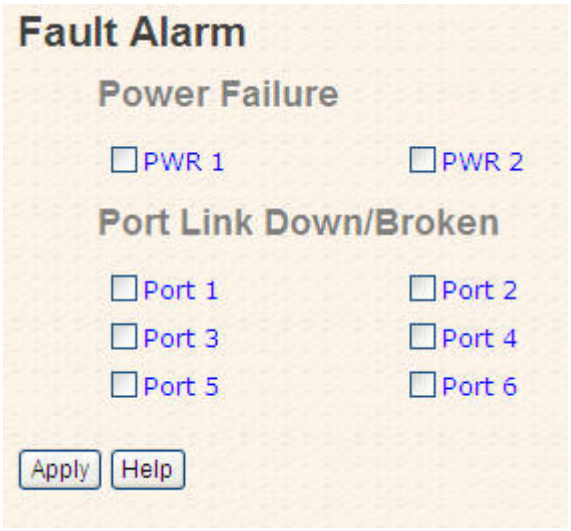

System Warning – SYSLOG Setting

The SYSLOG is a protocol to transmit event notification messages across networks. Please refer to RFC 3164 - The BSD SYSLOG Protocol

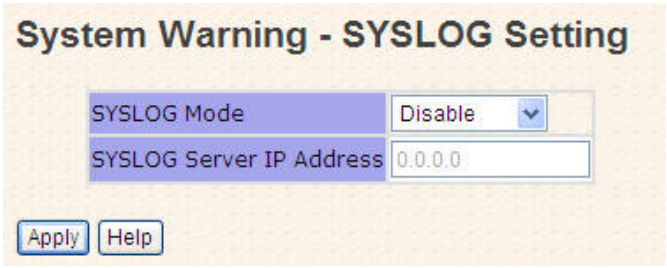

System Warning – SYSLOG Setting interface

The following table describes the labels in this screen.

Label	Description
SYSLOG Mode	■ **Disable:** disable SYSLOG. ■ **Client Only:** log to local system. ■ **Server Only:** log to a remote SYSLOG server.

	■ **Both:** log to both of local and remote server.
SYSLOG Server IP Address	The remote SYSLOG Server IP address.
Apply	Click "**Apply**" to set the configurations.
Help	Show help file.

System Event LOG

If system log client is enabled, the system event logs will show in this table.

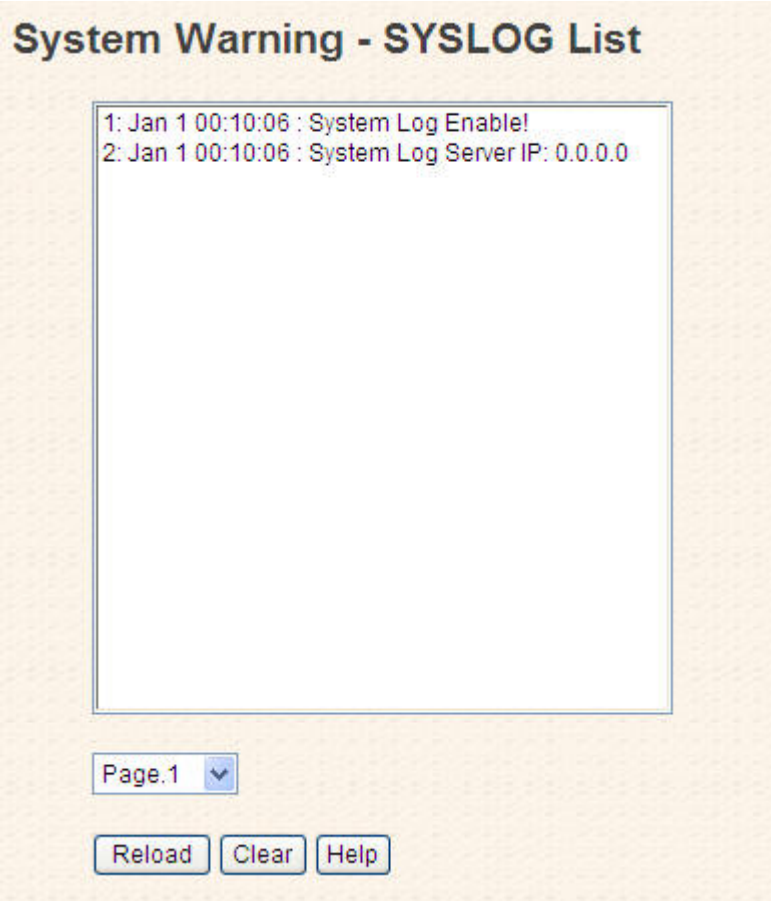

System event log interface

The following table describes the labels in this screen.

Label	Description
Page	Select LOG page.
Reload	To get the newest event logs and refresh this page.
Clear	Clear log.
Help	Show help file.

System Warning – SMTP Setting

The SMTP is Short for Simple Mail Transfer Protocol. It is a protocol for e-mail transmission across the Internet. Please refer to RFC 821 - Simple Mail Transfer Protocol.

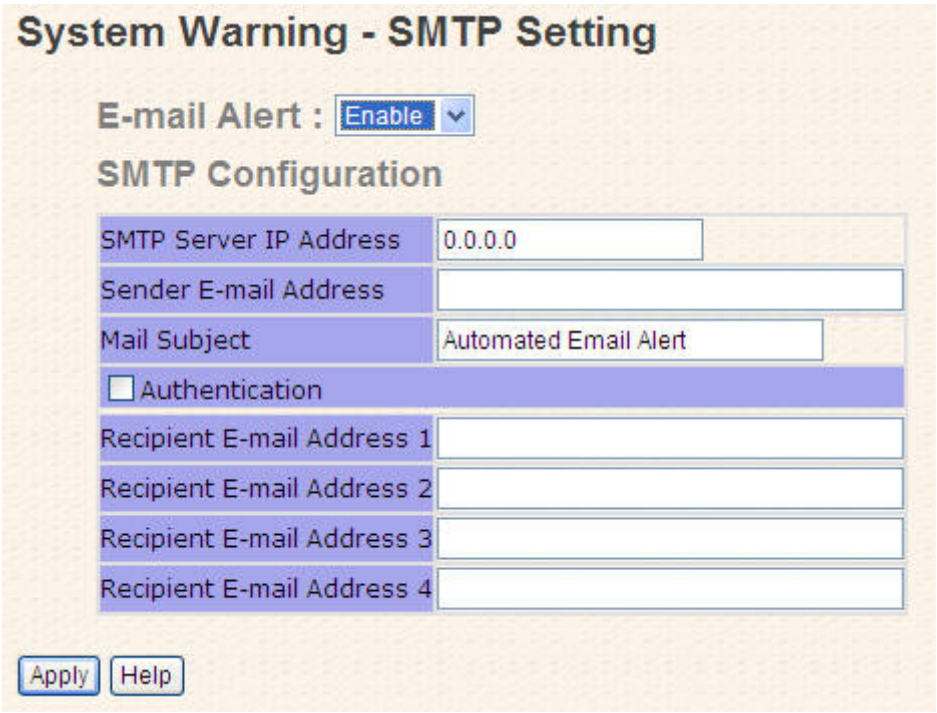

System Warning – SMTP Setting interface

The following table describes the labels in this screen.

Label	Description
E-mail Alarm	Enable/Disable transmission system warning events by e-mail.
Sender E-mail Address	The SMTP server IP address
Mail Subject	The Subject of the mail
Authentication	■ **Username:** the authentication username. ■ **Password:** the authentication password. ■ **Confirm Password:** re-enter password.
Recipient E-mail Address	The recipient's E-mail address. It supports up to 6 recipients per mail.
Apply	Click "**Apply**" to set the configurations.
Help	Show help file.

System Warning – Event Selection

SYSLOG and SMTP are the two warning methods that supported by the system. Check the corresponding box to enable system event warning method you wish to choose. Please note that the checkbox can not be checked when SYSLOG or SMTP is disabled.

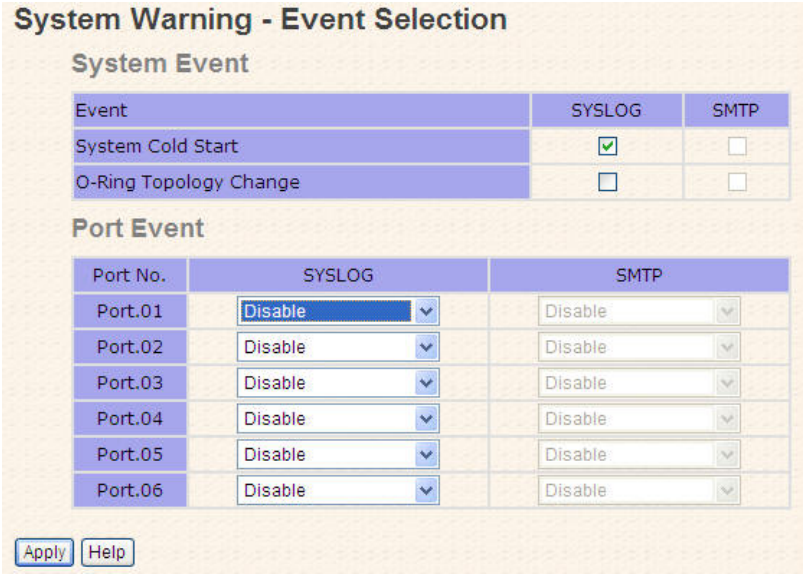

System Warning – Event Selection interface

The following table describes the labels in this screen.

Label	Description
System Event	
System Cold Start	Alert when system restart
O-Ring Topology Change	Alert when O-Ring topology change
Port Event	■ **Disable** ■ **Link Up** ■ **Link Down** ■ **Link Up & Link Down**
Apply	Click "**Apply**" to set the configurations.
Help	Show help file.

5.1.8 Front Panel

Show IPS-20XX series panel. Click "**Close**" to close panel on web.

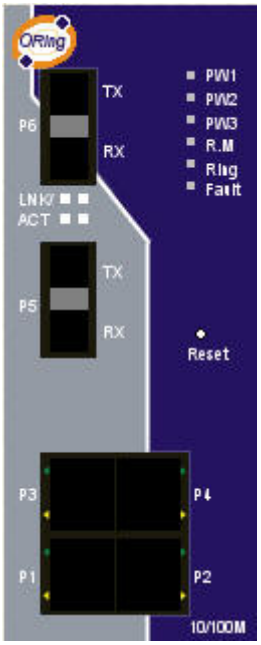

5.1.9 Save Configuration

If any configuration changed, "**Save Configuration**" should be clicked to save current configuration data into the permanent flash memory. Otherwise, the current configuration will be lost when power off or system reset.

System Configuration interface

The following table describes the labels in this screen.

Label	Description
Save	Save all configurations.
Help	Show help file.

5.1.10 LLDP

LLDP (Link Layer Discovery Protocol) function allows the switch to advertise its information to other nodes on the network and store the information it discovers.

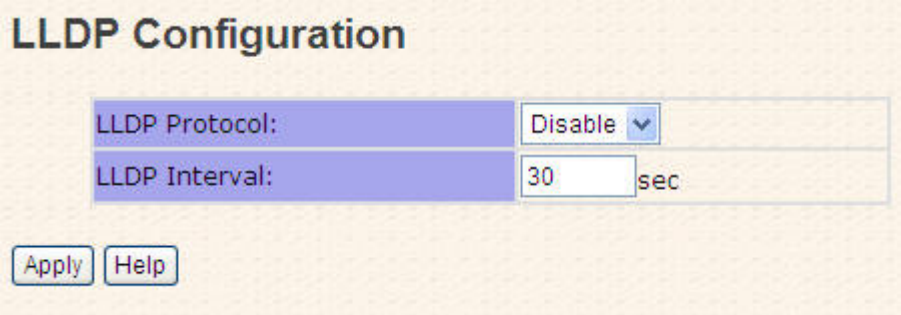

The following table describes the labels in this screen.

Label	Description
LLDP Protocol	"Enable" or "Disable" LLDP function.
LLDP Interval	The interval of resend LLDP (by default at 30 seconds)
Apply	Click "**Apply**" to set the configurations.
Help	Show help file.

Technical Specifications

Technology	
Ring redundancy	■ **RSTP** ■ **O-Ring** ■ **Couple Ring** ■ **Dual Homing** ■ **Fast recovery**
Ethernet Standards	IEEE802.3 10BASE-T IEEE802.3u 100BASE-TX IEEE802.3x Flow Control and Back pressure IEEE802.1D Spanning tree protocol IEEE802.1w Rapid Spanning tree protocol

MAC addresses	1024
Flow Control	IEEE 802.3x Flow Control and Back-pressure
VLAN	Port based
Processing	Store-and-Forward
Firmware upgrade	TFTP
Interface	
RJ45 Ports	10/100Base-T(X), Auto MDI/MDI-X
Fiber Ports	100 Base-FX(SC Connector) Multi-Mode: 0 to 2 km, 1310 nm (50/125 µm to 62.5/125 µm) Single-Mode: 0 to 30 km, 1310 nm (9/125 µm)
LED Indicators	Per Unit : Power (Green/Red) RJ45 Ports: Per Port : Link/Activity(Green/Blinking Green), Ring Port (Amber)
Power Requirements	
Power Input Voltage	IES-2060 & IES-2042 series: +12 ~ 48V DC in 7 pin Terminal block IES-2050: +9 ~ 30V DC in 3 pin Terminal block
Reverse Polarity Protection	Present
Power Consumption	7 Watts Max
Environmental	
Wide Operating Temperature	-40 to 70°C
Storage Temperature	-40 to 85°C
Operating Humidity	5% to 95%, non-condensing
Mechanical	
Dimensions(W x D x H)	IES-2060 & IES-2042F series: 52 mm(W)x 106 mm(D)x 144 mm(H) IES-2050: 64mm(W)x 102mm(D)x 25mm(H)
Casing	IP-30 protection
Regulatory Approvals	
Regulatory Approvals	FCC Part 15, CISPER (EN55022) class A
EMS	EN61000-4-2 (ESD), EN61000-4-3 (RS), EN61000-4-4 (EFT), EN61000-4-5 (Surge),

	EN61000-4-6 (CS)
Shock	IEC60068-2-27
Free Fall	IEC 60068-2-32
Vibration	IEC 60068-2-6
Warranty	5 years